


M4 & M6 Semi-Recessed Squirrel® Fixings Installation Guide

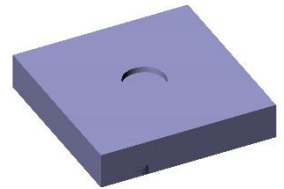


STEP 1 :

- Rout a 14mm diameter x 2mm deep pocket.
- Clean the pocket with De-Natured Alcohol.
- Ensure that the hole is no more than 2mm deep when using 6mm solid surface material.




STEP 2 :

- Clean the parts with De-Natured Alcohol.
- Assemble Squirrel® components with the aid of a screw.

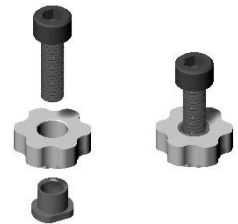


STEP 3 :

- Check the Squirrel Fixing® fits in to the hole.
- Half fill pocket with adhesive.

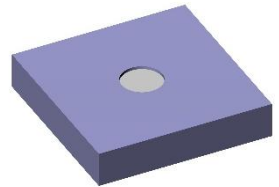

STEP 4 :

- Place Squirrel® fixing into pocket.
- Give fixing a ¼ turn.

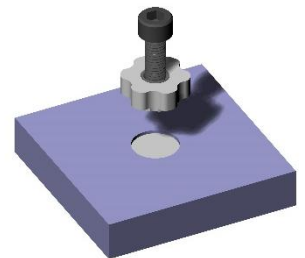

STEP 5 :

- Allow approx. 30-40 mins to harden.
- Do not remove excess adhesive.

